


4. Quick guide

4.1 Important remarks

Before using the ZRS 6060 for the first time, you need to have read and understood at least chapter 2 „Safety precautions and warning“ as from page 6 of the instruction manual. This quick guide only explains the most basic functions/operation steps. Some of the features shown on the model may be optional at extra cost.





4.2 On/Off

Turn on the unit by shortly pressing the on/off button . Before the display changes to the measuring mode, you will see shortly the logo of the manufacturer on a white background. (See also chapter 6 „Setting up“ as from page 18).

4.3 Calibrate

If the instrument indicates that the calibration is outdated, or if it is required by the applicable regulations, the ZRS 6060 has to be calibrated. Take care that the calibration standard / front plate is placed correctly on the ZRS 6060. The „calibration standard / front plate“ needs to be mounted on the calibration side. Otherwise, the ZRS 6060 will give you an error message.



Press the symbol  and  to open the calibration function. By pressing  you trigger the calibration. After the calibration you get a message that the calibration was successful. With  you confirm the calibration and you get back to the measuring mode. See also chapter 8 „Calibrate“ as from page 20.

4.4 Measure mode

Always place the ZRS 6060 on the product to be measured. This also applies if you use one of the optional illumination adaptors. By pulling the measuring trigger the reading is started.



